

SHARP INFORMATION



User manual

Models:

 

 

LC-32CFE6131K
LC-32CHE6131K
LC-40CFE6131K
LC-43CFE6131K
LC-49CFE6031K

LC-49CFE6032K
LC-50CFE6131K


Image for illustration purposes only. Actual product may vary.

REMOTE CONTROL INPUT SOURCE MENU








Key

-  For models with integrated DVD players.
-  For models with PVR Function.
-  For models with USB Playback.
-  For models with 3D functions.

 - 1** **STANDBY** - Switch on the TV when in standby or vice versa.
MUTE - Mute the sound or vice versa.

- 2** **NUMBER BUTTONS** - 0-9 to select a TV channel directly.
TV GUIDE - Opens the 7 day TV guide (digital TV mode).
 - To return to the previous channel viewed.

       - 3** **VOL (+/-)** - To increase/decrease the sound level.
PICTURE - Scrolls through picture mode options.
SOUND - Scrolls through sound mode options.
SOURCE - To display the input/source menu.
CH (+/-) - To increase or decrease the channel being watched.
MENU - To display OSD menu.
EXIT - To exit all menus.
(▲/▼/◀/▶/OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference.
BACK - To go back a previous step.
FAV - To display favourites menu.


- 4** **INFO** - Press once for now/next channel information.
 - Press twice for information about the current programme.
TEXT - To enter/exit Text.
SUBTITLE - To switch the dialogue at the bottom of the screen (on/off).
TV - Change input source to the digital TV source.
YOUTUBE - Access the Youtube App.
MEDIA - Access the USB media function.
NET+ - Access the Aquos Net application.
RECORD - Access the USB record function.
 -  - To restart the current chapter
 -  - To advance forward to the next chapter
 -  - To stop the playback/Eject Disc
 (To EJECT the disc press/hold the  button for 4 seconds)
 -  - To play in fast rewind mode
 -  - To play in fast forward mode
 -  - To play/pause
REC LIST - Opens the list of what has been previously recorded.
GOTO - To go to a specific chapter.
A-B - Press once to set point, press a second time to return to point.
3D - Press repeatedly to cycle through the 3D options.
REPEAT - To repeat playback.



Buttons to use when pairing the remote control to the TV.

If the remote control does not function with the TV, the remote control may need to be paired with the TV set, please refer to the 'Frequently Asked Questions' page for more information.

 TV BUTTONS AND INPUT SOURCE MENU



- 1 Volume up and menu right
- 2 Volume down and menu left
- 3 Programme/channel up and menu up
- 4 Programme/channel down and menu down
- 5 Displays menu/OSD
- 6 Displays the 'Input Source' menu
- 7 Standby power On/Off (If the standby button is pressed down for a few seconds whilst the TV is running, a menu will appear specifically for pairing remote control with TV.)

Note: The shape of the TV buttons may vary by model.

Choosing Mode Input/Source

Use the source menu to switch between input/connections.

 
A) Using the buttons on the remote control:

- 1) Press [SOURCE] - The source menu will appear.
- 2) Press [V] or [A] to select the input you require.
- 3) Press [OK].

B) Using the buttons on the Television:



- 1) Press [SOURCE].
- 2) Scroll up / down using CH+/ CH- buttons to the input/source you require.
- 3) Press Vol+ to change input/source to the one selected.

For further information on input/connections please view 'Connections' pages.

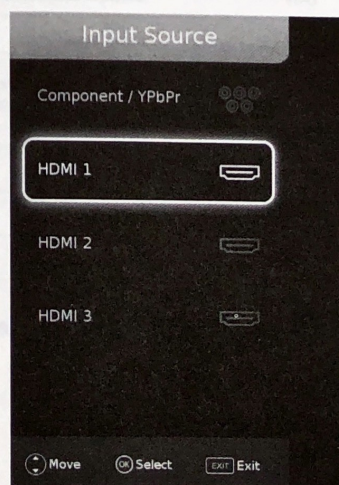

An example of the 'Input Source' menu (will vary by model)

  APPLICATIONS MENU

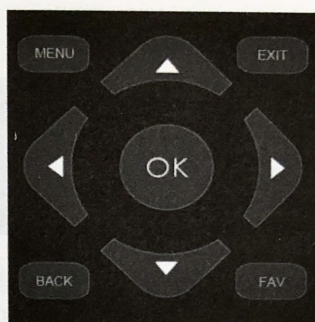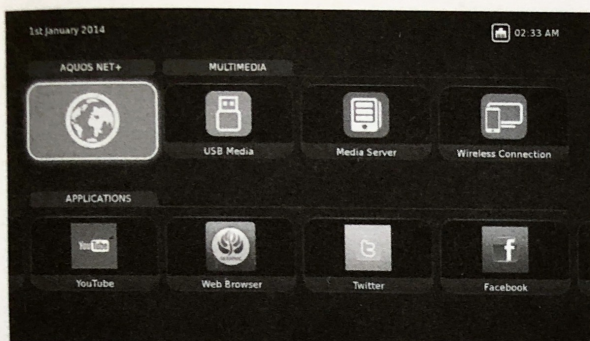

To access this menu, press [MENU] button on the remote control and scroll left/right.
To select a sub menu press [OK]

 
If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.

To confirm any settings press [OK] button.

To exit this menu at anytime, press the 'MENU', 'EXIT' or 'BACK' button on the remote control.

The Application Menu allows you to access the TV set's "SMART" features. In this menu you can enter various functions including Youtube, Facebook, etc. At the bottom of the screen there are some key apps for easy and quick access.



Aquos Net+

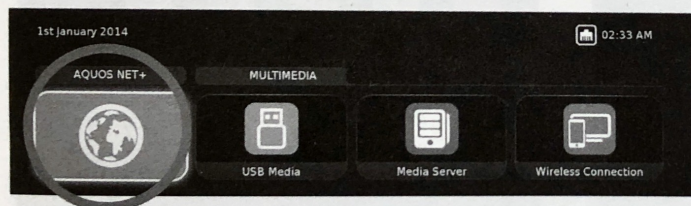

Aquos Net+ is a portal to a variety of apps and multimedia which the TV Accesses via the internet.

To enter Aquos Net+ you will be prompted to enter a language and accept terms and conditions. once the relevant information has been entered you will be able to use a range of features such as MUZU.TV, Viewster and Dailymotion.

  
Content is updated and managed from a central source, so look out for new features and updates.

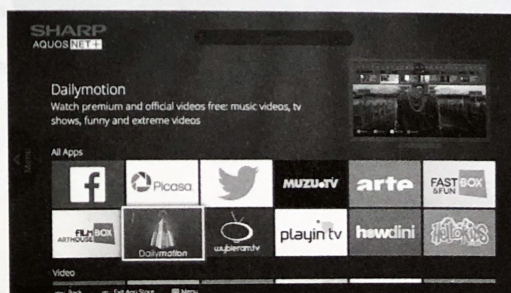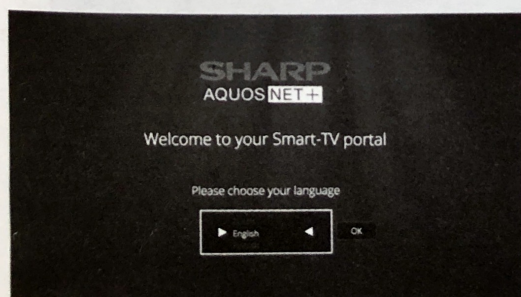

Note: If you wish to reset the settings for AQUOS NET+ back to the default settings, you will need to access the AQUOS NET+ portal and enter the settings menu. In the settings menu press the YELLOW button on the remote control, you will then be asked 'Yes' or 'No' to confirm your decision, highlight 'Yes' and press 'OK' on the remote control to complete the reset process.


APPLICATIONS MENU

 USB mode and media server

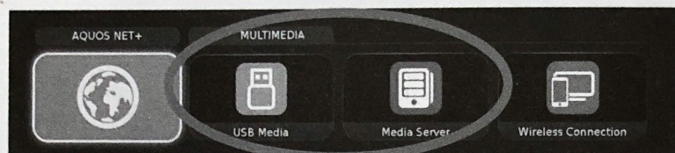

The USB media and the media server offer the playback of various different types of content that is either saved on your USB memory stick or external media server. (USB mode allows you to view/playback files from an external USB device and Media Server connects to your home network and can view/playback files from your laptop, PC, tablets and smart phones).

 
When accessing the USB media or media server features the below menu screen will appear. The content will be divided into Photo, Music, Movie and All.

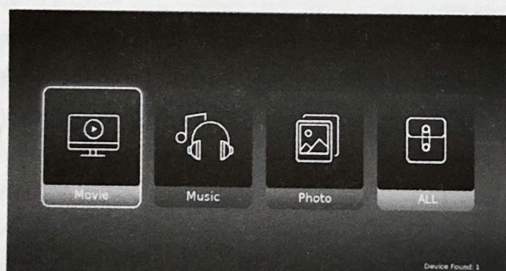


1) You can navigate through the menus using the scroll ▲▼▶◀ buttons on the remote control, to confirm the item you wish to play/view press the [OK] button.



 2) USB mode - Select the USB drive (If your drive only has 1 partition you will only see 1 item)
Media server - Select the external device that you would like to access.

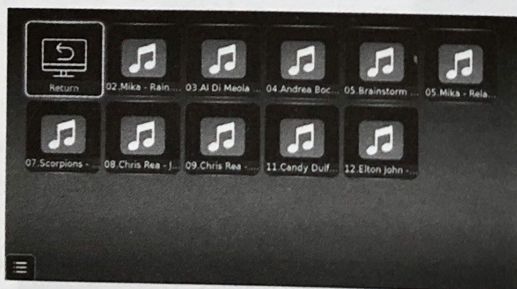

 3) You can now access the item. Press OK to view.

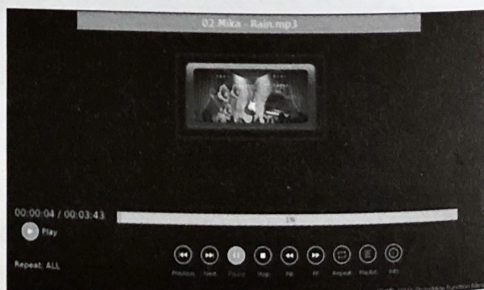

4) Whilst viewing your media, you can control the item by using the remote control buttons (below) or by pressing (Info) to access the on-screen playback menu, you can now make your selection by using the ▲▼▶◀ and (OK) buttons on the remote control.

Fig.A

 


Tip: If you experience a playback issue, please ensure the files being used are the correct format (example - the picture plays but no sound) See technical specification page for compatible file types

Note: USB extension cables are not recommended as they can cause a reduction in picture/audio quality and stoppages during play back of USB content.

APPLICATIONS MENU


Wireless display

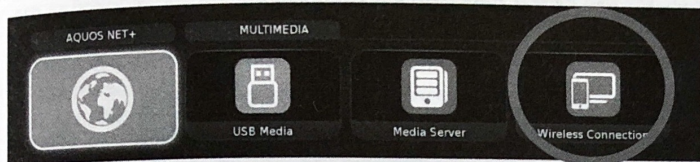

The Wireless Display feature allows you to connect to a compatible external device such as a laptop, tablet and/or smart phone. Once connected, your device will mirror content to the TV.



 Applications

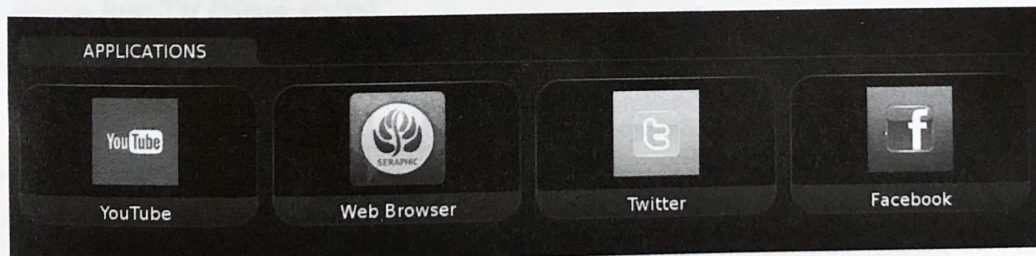

Contains the most commonly used apps for quick and easy access.

Youtube - Videosharing website allows you to discover, watch and share originally-created videos.

Web browser - Application for accessing websites via the internet.

Twitter - Online social networking service that enables users to send and read short 140-character messages called "tweets".

Facebook - The popular social networking website that allows registered users to create profiles, upload photos and videos.

7 DAY TV GUIDE

TV Guide is available in Saorview/Freeview TV mode. It provides information about forthcoming programmes (where supported by the Saorview/Freeview channel). You can view the start and end time of all programmes and on all channels for the next 7 days and set reminders.

1) Press [TV GUIDE] on the remote control, the following 7 Day TV Guide will appear.

2) Navigate through the menu using ▲▼▶◀.

You can now:

Record a programme by pressing RED (USB device must be connected)

Set a reminder by pressing GREEN

View a previous day by pressing YELLOW

View the next day by pressing BLUE

3) Press [EXIT] to exit the 7 day TV Guide

Channel List

To view the channel list, please ensure that the TV is set to either the analogue or digital source and no menus or TV notifications are displayed.

1) Press [OK] on the remote control and the channel list menu will appear.

2) Press LEFT / RIGHT arrow to filter desired channel types (Digital TV, HD channels, Radio, Data, All).

3) Scroll through the channel list by using ▲▼ buttons then press [OK] to view the channel that is currently highlighted.

4) Press [EXIT] to exit the channel list.