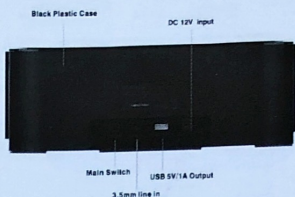 


# Maxell Bluetooth Wireless Speaker with Qi Charging and NFC Connectivity


## Quick Start Guide

- **Wireless** Bluetooth connection – version 4.0.
- **Wireless** Qi Charging – Conveniently charge your Qi-compatible music device without wires by placing it on the built-in Qi inductive charging pad.
- **Wireless** NFC pairing - for quick and easy connection.
- 2.0 Channel Stereo sound.
- High definition sound with Apt-X/ AAC which delivers high quality, near lossless wireless audio streaming for superior sound.
- Easy to use touch controls.
- Superior sound for hands-free calls.
- USB charging port.
- Suitable for various USB charged devices.
- 3.5mm stereo auxiliary input – users can connect the speakerphone to a portable device with a 3.5mm jack.
- Includes IR remote.



### Quick Start Guide:

#### Switch the speaker on

1. Connect the power supply cable to the connector on the speaker.
2. Connect a suitable plug to the AC-adaptor of the power supply.
3. Plug the power supply into a wall outlet.
4. Press the ON/OFF switch at the back of the speaker, Or press  button of the remote.

If you have never paired your speaker with a device, the speaker goes into searching mode automatically when it is switched on, and the Bluetooth indicator starts to flash slowly.

If you have already paired the speaker with one or more devices, the speaker connects to the last device it was used with.

#### Pair your device

Before using your speaker with a phone or other compatible device for the first time, you must pair and connect it to the device.

You can only connect the speaker to one device at a time, but you can connect to another device on the go.

When the speaker is connected, the Bluetooth status indicator light is blue (the Bluetooth status of the white color speaker indicator light is amber)

If the connected device goes out of Bluetooth range, the speaker tries to reconnect for 10 minutes. When the device comes back into range, the speaker reconnects automatically.

You can also use a standard audio cable (3.5 mm) to connect your device to the audio connector in the speaker. When you connect your speaker and device using a wired connection, speaker will switched to wired connection automatically.

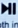

#### Pair the speaker using NFC

With Near Field Communication (NFC), you can easily pair and connect your speaker to your compatible device.

If your device supports NFC, switch NFC on, and touch the NFC area of the speaker with the NFC area of your device. The speaker connects to your device automatically. Some devices may ask for confirmation on connection. For details on NFC, see your device user guide.

If your device doesn't support NFC, pair the speaker manually.

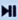
#### Pair the speaker manually

1. You can pair your speaker manually with Bluetooth.
2. Switch on your speaker and phone or other compatible device.
3. If you've previously paired your speaker with another device, either press and hold  button on speaker for 3 seconds or press and hold  the PAIRING button on of the remote to switch Bluetooth pairing mode ON and the Bluetooth indicator starts to flash rapidly.
4. To switch Bluetooth on in your phone, and search for Bluetooth devices. For details, see your phone user guide.
5. On your phone, select the speaker (Name: MXSP-WP2000) from the list of found devices.
6. If asked, type in the passcode "0000".

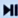
#### Play music & HandsFree

While playing music on your phone, you can control the music and calls with your speaker as well.


Play a song


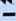
- Select a song in the music player list, and press  to play, pause, or resume playing.

Answer the phone

- If you receive a call while listening to music, the music is paused. And press  to answer and Hang up.


- Play the next song: Press 

- Play the previous song: Press 

- Adjust the volume: Press  or 


#### Remote


Play a song

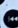
- Select a song in the music player list, and press  to play, pause, or resume playing.



Answer the phone

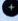
- If you receive a call while listening to music, the music is paused.


And press  to answer and Hang up.

- Play the next song: Press 

- Play the previous song: Press 

- Adjust the volume: Press  or 

- Mute the music: Press 

- Unmute the music: Press 

#### Charge another device wirelessly

Place your phone or other compatible device on the wireless charging area on top of the speaker.

You can listen to music while charging, but make sure the music is not too loud — vibrations may cause your phone to fall from the speaker.

It is normal for your speaker and phone to get warm, and they may get even warmer if you use your phone too.

The speaker switches off automatically if it gets too warm, wait for 5 minutes and try again.

Keep the speaker free of clutter, if there is something besides your phone on the speaker.

#### Reset & Protect

- The unit reset: If there is any abnormal reaction using this unit, please shut off the power to restart.
- Touch protect: Any object with electric contact button for more than 30s will start the protection.
- Power protect: OVP/OCP/OTP/FOD.

